



**AION UT**

**Quick Start Guide**

## 1. Know the vehicle

### Smart key



- 1 Lock vehicle
- 2 Open the liftgate
- 3 Unlock vehicle
- 4 Power on the remote control and turn on the air conditioner
- 5 Indicator lamps

### Unlock and lock vehicle

Method 1: Intelligent active unlock/lock

- ◆ Automatically unlock when approaching the vehicle with the smart key.
- ◆ Automatically lock when leaving the vehicle with the smart key.

Method 2: Unlock and lock with smart key



### Open the liftgate

Method 1: Unlock with the micro switch




### Open the charging inlet cap



After the vehicle is unlocked, press the edge of the charging inlet cap to open the charging inlet cap

Method 3: Unlock and lock the vehicle with the micro switch

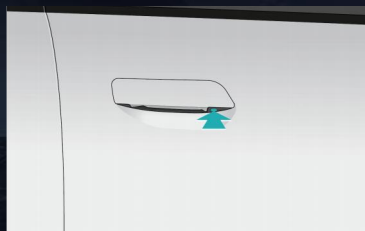


- ◆ Approach the vehicle with the smart key, and the vehicle will automatically unlock/lock when pressing the micro switch.

Method 2: Unlock by pressing and holding button on the smart key


## 2. GAC APP

1. Download the GAC APP from the mobile app store and register

2. Bind the vehicle

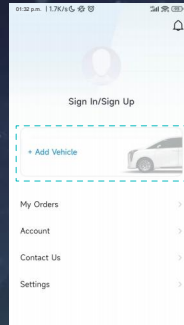

3. Owner identification

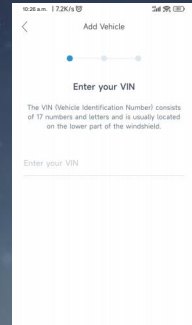


4. Set PIN Code




- ◆ Set PIN Code for subsequent owner identification related to vehicle control.

5. Vehicle control

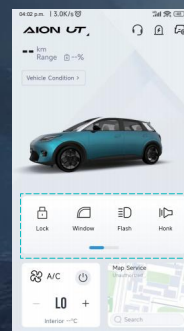

- ◆ After binding and authentication, multiple vehicle control functions are supported (the specific functions are subject to the actual vehicle).

6. Vehicle condition inquiry

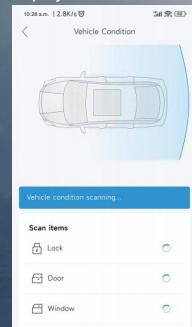

- ◆ Display the current vehicle's status upon check.

7. A/C settings



8. Charging management



- ◆ The interface is for reference only. The actual vehicle shall prevail.
- ◆ Some of the configurations and features described in this manual may not be equipped on your vehicle. Please refer to the actual vehicle you purchased for the final specifications.

### 3. Driving mode

#### Introduction to driving modes

Driving mode	Description
Comfort	The power response is moderate, providing a comfortable driving experience and moderate driving range.
Sports	The power response is strong, focusing on driving pleasure.
Energy saving	The power response is stable, offering max driving range.
Extreme energy saving	The vehicle operates with the lowest energy consumption to improve driving range. The mode is suitable when the traction battery is low.

#### Switch driving modes



- ◆ Enter the main interface of the central console display to switch between Comfort, Sports, Energy Saving, and Custom driving modes.
- ◆ When the battery is low, activate the Extreme Energy Saving mode via the central console display.

## 4. Intelligent driving assistance

### Set ACC

After adaptive cruise control (ACC) is turned on, the system will detect the information of vehicle ahead, and activate cruise control (no vehicle ahead) or automatically follow the vehicle ahead (if any)




Setting steps:

1. Set the gear lever to "D" position, and move the lever toward "D" position once to activate the ACC
2. Adjust the cruise speed by scrolling the scroll wheel of the steering wheel up or down
3. Adjust the following distance by moving the scroll wheel of the steering wheel left or right

### Set ICA

ICA can automatically activate following vehicle ahead during cruise control and keep the vehicle traveling in the middle of the lane

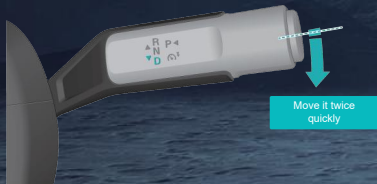

Setting steps:

Set the gear lever to "D" position, and move the lever toward "D" position twice to activate ICA


- ◆ Only some intelligent driving functions are listed. Please refer to the *Owner's Manual* for other intelligent driving functions.
- ◆ Intelligent driving functions can only assist the driver in safe driving and are not applicable in all cases.
- ◆ The driver should always pay attention to the vehicle condition and driving environment, and cannot completely rely on the intelligent driving functions.
- ◆ The interface is for reference only, and the actual display shall prevail.

## 5. Vehicle charging

### AC charging and DC charging



1. Unlock the vehicle, and press the edge of the charging inlet cap for opening

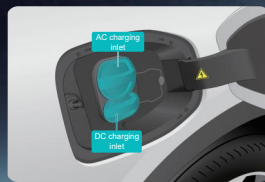

2. Open the charging port dust cover and connect the charging gun.




3. When the APP starts, the charging pile enters the charging state (for DC charging, refer to the actual indication)



4. After charging is complete, unlock the vehicle, remove the charging gun, close the charging port dust cover, and close the charging port cover.

### Emergency unlocking

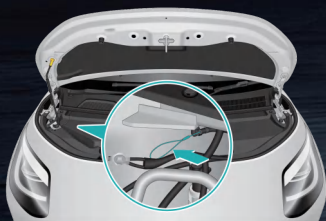


- ◆ If the charger cannot be unlocked, manually unlock it by pulling the manual unlocking cable on the passenger side of the front body.

## 6. Charging reservation


- ◆ Observe the following steps to reserve for charging.




1. Enable charging reservation

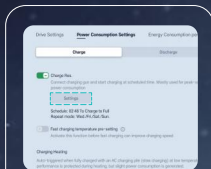


2. Set the charging reservation time

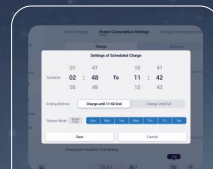

3. Set the charging start and end times, and the repeat date

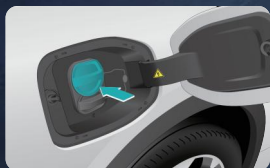

5. Open the charging port dust cover and connect the charger.

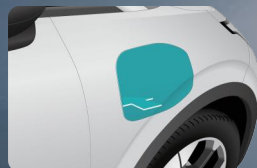

4. Unlock the vehicle, and press the edge of the charging inlet cap for opening



6. Connect the power, start to charge at the start time, and end charging upon completion




7. After charging, unlock the vehicle, remove the charger, close the charging port dust cover, and close the charging port cover.

- ◆ Charging Reservation is only applicable to slow A/C charging.
- ◆ Set Charging Reservation more conveniently through the GAC APP.
- ◆ GAC Brand charging piles are recommended for reservation for charging, as other charging piles may not support this function.

## 7. Emergency treatment

If the vehicle key is not functional, you can unlock the vehicle in an emergency using the following methods

### Door unlocking with mechanical key

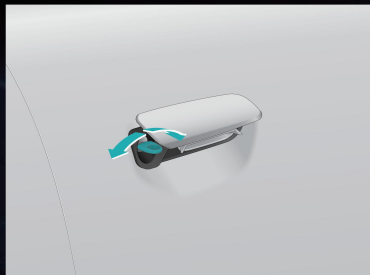

1. Slowly pull up the left front door to the max opening angle and hold it.
2. Insert the mechanical key into the driver's door lock hole.
3. Turn the mechanical key to unlock or lock the driver-side door. After unlocking, pull the door handle to open the driver-side door.


### Trunk emergency unlocking

1. Fold down the seat back



- ◆ Pull up the unlocking handle, and tilt the seat back forward.

2. Unlock and open the liftgate

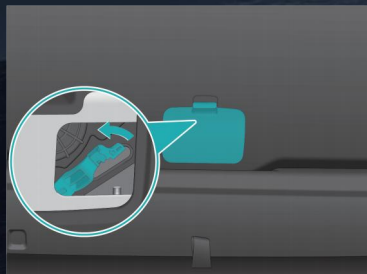

- ◆ Toggle the emergency unlocking switch.

### Electric power system fault indicator lamp



- ◆ If the electric power system fault indicator lamp on the instrument panel comes on, pull over and ask for advice by calling GAC Brand customer service hotline.


### 12V low voltage supply system fault warning lamp



- ◆ If the 12V low-voltage power supply system fault warning indicator on the instrument cluster illuminates, please refer to the *Owner's Manual* to attempt a jump start, or contact the GAC Brand customer service hotline for assistance.

## 8. Call for rescue

### E-Call

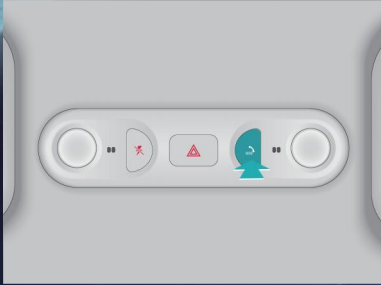

- ◆ Press and hold the SOS button for 2-5 seconds, and call the emergency aid center.
- ◆ Within 5 seconds after the SOS button is released, short press the SOS button to cancel E-Call.
- ◆ The call to the emergency aid center cannot be canceled once the SOS button has been released for more than 5 seconds; the emergency aid center is the only one who can end the call.

- ◆ Some of the configurations and features described in this manual may not be equipped on your vehicle. Please refer to the actual vehicle you purchased for the final specifications.

