

## 1. Know the vehicle

### Smart key



- 1 Lock vehicle
- 2 Open the liftgate
- 3 Unlock vehicle
- 4 Power on the remote control and turn on the air conditioner
- 5 Indicator lamps

### Unlock and lock vehicle

Method 1: Intelligent active unlock/lock

- ◆ Automatically unlock when approaching the vehicle with the smart key.
- ◆ Automatically lock when leaving the vehicle with the smart key.

Method 2: Unlock and lock with smart key



Method 3: Unlock and lock the vehicle with the micro switch



- ◆ Approach the vehicle with the smart key, and the vehicle will automatically unlock/lock when pressing the micro switch.

### Open the liftgate

Method 1: Unlock with the micro switch



Method 2: Unlock by pressing and holding button on the smart key

### Open the charging inlet cap




After the vehicle is unlocked, press the edge of the charging inlet cap to open the charging inlet cap


## 2. GAC APP

1. Download the GAC APP from the mobile app store and register


2. Bind the vehicle

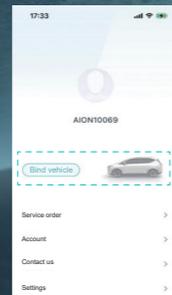

3. Owner identification

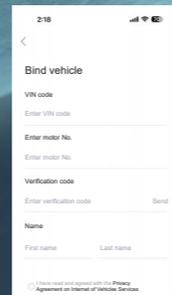

4. Set PIN Code

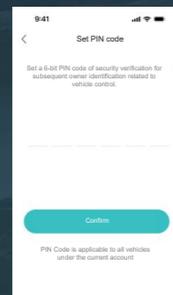

- ◆ Set PIN Code for subsequent owner identification related to vehicle control.

5. Vehicle control




- ◆ After binding and authentication, multiple vehicle control functions are supported (the specific functions are subject to the actual vehicle).

7. A/C settings



8. Charging management

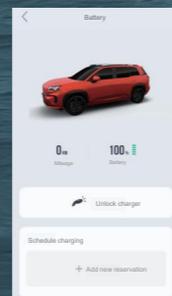

## 3. Driving mode

### Introduction to driving modes

Driving mode	Description
Comfort	The most suitable combination of steering effort, acceleration response, and braking response for daily driving
Sports	Agile performance response, with steering effort, acceleration response, and braking response more focused on driving pleasure
Energy saving	Integrated pedal mode, controlling vehicle acceleration and deceleration through the accelerator pedal. This mode has a high energy recovery rate and can significantly improve vehicle range, suitable for urban conditions
Extreme energy saving	When the extreme energy-saving mode is activated, the vehicle operates with the lowest energy consumption, and vehicle power and air conditioning are limited

### Switch driving modes



- ◆ Enter the main interface of the central console display to switch between Comfort, Sports, Energy Saving, and Custom driving modes.
- ◆ When the battery is low, activate the Extreme Energy Saving mode via the central console display.

## 4. Intelligent driving assistance

### Set ACC

After the ACC is turned on, the system will detect the information of vehicle ahead, and activate cruise control (no vehicle ahead) or automatically follow the vehicle ahead (if any)



- Setting steps:
1. Set the gear lever to "D" position, and move the lever toward "D" position once to activate the ACC
  2. Adjust the cruise speed by scrolling the steering wheel roller up or down
  3. Adjust the following distance by moving the steering wheel roller left or right

### Set ICA

ICA can automatically activate following vehicle ahead during cruise control and keep the vehicle traveling in the middle of the lane



- Setting steps:
- Set the gear lever to "D" position, and move the lever toward "D" position twice to activate the ICA


- ◆ Only some intelligent driving functions are listed. Please refer to the *Owner's Manual* for other intelligent driving functions.
- ◆ Intelligent driving functions can only assist the driver in safe driving and are not applicable in all cases.
- ◆ The driver should always pay attention to the vehicle condition and driving environment, and cannot completely rely on the intelligent driving functions.
- ◆ The interface is for reference only, and the actual display shall prevail.

## 5. Vehicle charging


### AC charging and DC charging



1. Unlock the vehicle, and press the edge of the charging inlet cap for opening

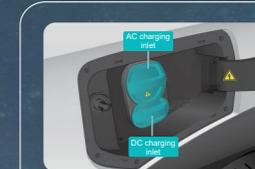

2. Open the charging port dust cover and connect the charger

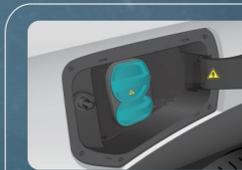

4. After charging is complete, unlock the vehicle and unplug the charger, close the charging port dust cover, and close the charging port cover



3. When the APP starts, the charging pile enters the charging state (for DC charging, refer to the actual indication)

### Emergency unlocking



- ◆ If the charger cannot be unlocked, manually unlock it by pulling the manual unlocking cable of the charger in the front cabin.

\*: Applicable to some models

◆ Some configurations and features described in this manual may not be equipped on your vehicle, please refer to the actual vehicle you purchased for details. The interface is for reference only. The actual vehicle shall prevail.



## 6. Charging reservation

◆ Observe the following steps to reserve for charging.



1. Enable charging reservation

2. Set the charging reservation time

3. Set the charging start and end times, and the repeat date



5. Open the charging port dust cover and connect the charger

4. Unlock the vehicle, and press the edge of the charging inlet cap for opening



6. Connect the power, start to charge at the start time, and end charging upon completion

7. Unlock the vehicle, remove the charger, close the charging port dust cover, and close the charging port cover

- ◆ Charging Reservation is only applicable to slow A/C charging.
- ◆ Set Charging Reservation more conveniently through the GAC APP.
- ◆ GAC charging piles are recommended for reservation for charging, as other charging piles may not support this function.

## 7. Emergency treatment

If the vehicle key is not functional, you can unlock the vehicle in an emergency using the following methods

### Door unlocking with mechanical key

1. Extend the door handle
2. Unlock/lock the door



◆ Press the front side of the door handle in the direction of arrow A to uplift the rear side of the door handle.




◆ Insert and turn the mechanical key to unlock or lock the door.

### Trunk emergency unlocking

1. Fold down the seat back
2. Unlock and open the liftgate



◆ Pull up the unlocking handle, and tilt the seat back forward.

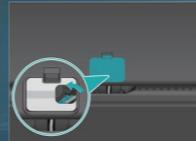

◆ Toggle the emergency unlocking switch.

### Electric power system fault indicator lamp



◆ If the electric power system fault indicator lamp on the instrument cluster comes on, pull over and ask for advice by calling GAC Brand's customer service hotline.

### 12V low voltage supply system fault warning lamp



◆ If the 12V low voltage supply system fault warning lamp on the instrument cluster lights up, you can call GAC Brand customer service hotline for assistance.

## 8. Call for rescue

### E-Call



- ◆ Press and hold the SOS button for 2-5 seconds, and call the emergency aid center.
- ◆ Within 5 seconds after the SOS button is released, short press the SOS button to cancel E-Call.
- ◆ The call to the emergency aid center cannot be canceled once the SOS button has been released for more than 5 seconds; the emergency aid center is the only one who can end the call.



Second-Generation **AION V**

Quick Start Guide

◆ Some configurations and features described in this manual may not be equipped on your vehicle, please refer to the actual vehicle you purchased for details.